

**EPIC WALL SWITCH**  
1.7 (9600 8 N 1)

Mode Buttons & Functions

1(White Stars) 2 (Advanced) 3 (RGB Stars) 4 (Mini Lights) 5 (Stars with a Shooting Star) 6 (Epic 4 Stars)

\* When the command is programmed, the corresponding BUTTON will FLASH 10 times. \*  
To change Switch Mode: Hold a button while powering up.

BUTTON	MODE 1 - Controlling Epic Stars	
	SHORT PRESS <1 Second	LONG PRESS <2 Second
1	Stars on solid 100%	Stars on solid 100%
2	Stars off	Stars off
3	Tropical Winds - Fast Sparkle	Tropical Winds - Fast Sparkle
4	Night Sky - 3D Perspective	Night Sky - 3D Perspective
5	Sleep Mode - Stars turn off in 60 min. Button LED will pulse	Sleep Mode - Stars turn off in 60 min. Button LED will pulse
6	Rain Shower	Rain Shower
BUTTON	MODE 2 - Controlling Epic Advanced	
	SHORT PRESS <1 Second	LONG PRESS <2 Second
1	Solid color select	Reset solid color to color 1 - Warm White
2	RGB Dim - All RGB channels dim 4%	Pauses color cycle
3	Recall solid color preset A	Save solid color preset A
4	Recall solid color preset B	Save solid color preset B
5	Show select	Reset show to show 1 - Color Cycle
6	All LED Channels off	Sleep Mode - Will turn off LEDs in 60 min. Button LED will pulse
BUTTON	MODE 3 - Controlling Epic RGB Stars	
	SHORT PRESS <1 Second	LONG PRESS <2 Second
1	Kaleidoscope	Party Mode
2	Chroma Sweep	Iridescent White
3	Dim by 10%	Dim directly to 10%
4	Brighten by 10%	Brighten directly to 100%
5	Solid Color Sparkle Select	Go to color 1 sparkle (blue)
6	RGB Stars off	Sleep Mode - Will turn off LEDs in 60 min. Button LED will pulse
BUTTON	MODE 4 - Controlling Epic Mini Lights	
	SHORT PRESS <1 Second	LONG PRESS <2 Second
1	Sets Both Channels to 100%	Sets Both Channels to 100%
2	Sets Both Channels to 75%	Sets Both Channels to 75%
3	Sets Both Channels to 50%	Sets Both Channels to 50%
4	Sets Both Channels to 25%	Sets Both Channels to 25%
5	Sets Both Channels to 10%	Sets Both Channels to 10%
6	Turns Both channels off	Turns Both channels off

BUTTON		MODE 5 - Controlling Epic Stars and a Shooting Star	
		SHORT PRESS <1 Second	LONG PRESS <2 Second
1	Night Sky - 3D Perspective	Night Sky - 3D Perspective	Night Sky - 3D Perspective
2	Rain Shower	Rain Shower	Rain Shower
3	Party Mode	Party Mode	Party Mode
4	Stars on solid 100%	Stars on solid 25%	Stars on solid 25%
5	Shooting Star every 10 seconds	Shooting Star every 60 seconds	Shooting Star every 60 seconds
6	Global Off	Sleep Mode - Will turn off Stars in 60 min. Button LED will pulse	Sleep Mode - Will turn off Stars in 60 min. Button LED will pulse


BUTTON		MODE 6 - Controlling Epic 4 Stars and a Shooting Star	
		SHORT PRESS <1 Second	LONG PRESS <2 Second
1	Night Sky - 3D Perspective	Night Sky - 3D Perspective	Night Sky - 3D Perspective
2	Rain Shower	Rain Shower	Rain Shower
3	Party Mode	Party Mode	Party Mode
4	Stars on solid 100%	Stars on solid 25%	Stars on solid 25%
5	Shooting Star every 10 seconds	Shooting Star every 60 seconds	Shooting Star every 60 seconds
6	Global Off	Sleep Mode - Will turn off Stars in 60 min. Button LED will pulse	Sleep Mode - Will turn off Stars in 60 min. Button LED will pulse

**ADVANCED MODES**

**MODES & COLOR BUTTON FUNCTIONS**

**EPIC ADVANCED  
SOLID COLOR MODES**

MODE	COLOR
1	Warm White
2	White
3	Blue
4	Gold
5	Magenta
6	Light Blue
7	Violet
8	Cyan
9	Pink
10	Orange
11	Green
12	Red
13	Light Green

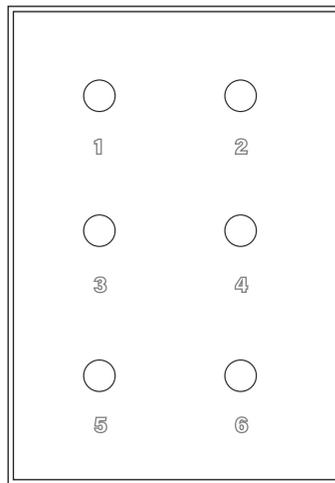

**RGB STARS  
SOLID COLOR MODES**

MODE	COLOR
1	Blue
2	Cyan
3	Magenta
4	Gold
5	Green
6	Red
7	White

**EPIC ADVANCED  
SHOW MODES**

MODE	COLOR
1	Color Cycle
2	Sunset
3	Tranquility
4	Morning Sky
5	Royal
6	USA
7	Twilight
8	Valentines Day
9	Easter
10	Autumn
11	Christmas
12	Cool Cabaret
13	Rainbow